

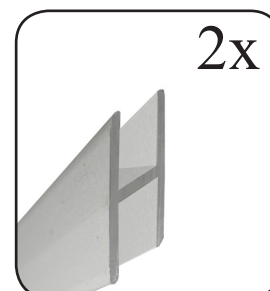
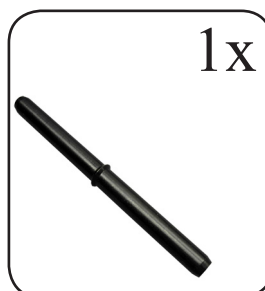
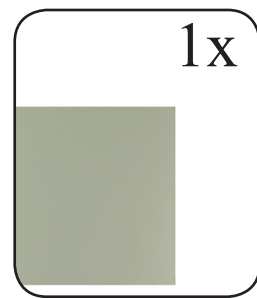
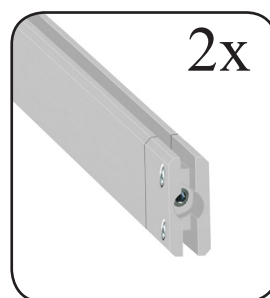
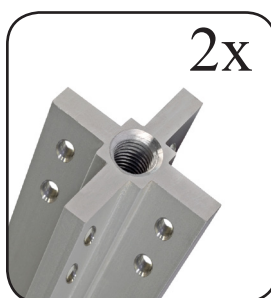


# Assembly instructions for the Information panels


## „Attachment module 180° VIII “ 61.439

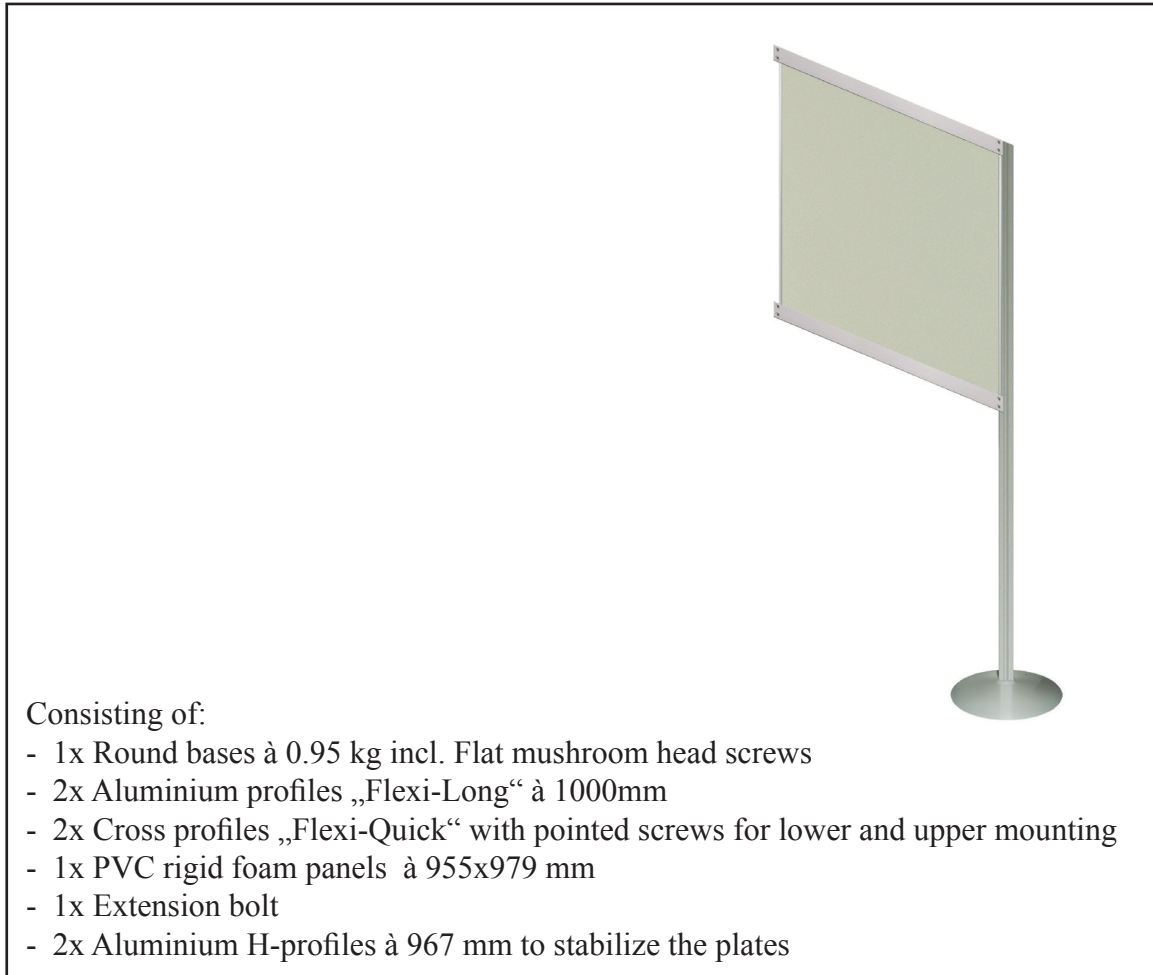

1. Mount the round base to the aluminium profiles using the flat mushroom head screws. Ensure that the holes face upward.



2. Insert the extension bolt in the bottom profile and then mount the top profiles. Ensure that the holes face upward.

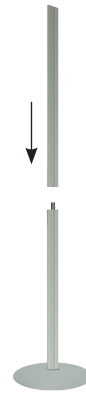

3. Mount the lower cross profile including pointed screws and insert the panel with the H-profiles.



4. Finally mount the upper cross profile including pointed screws.

