
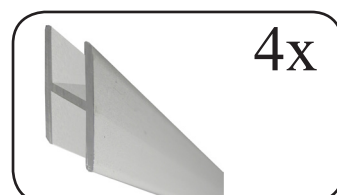
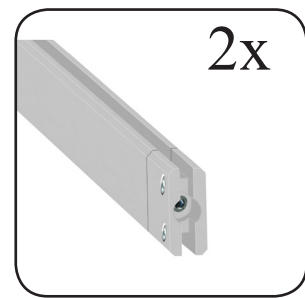
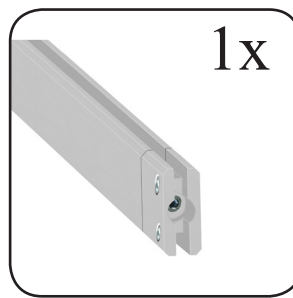
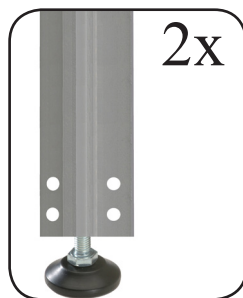
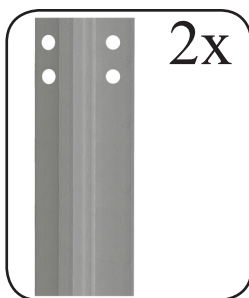



Assembly instructions for the Basic Modul Z100

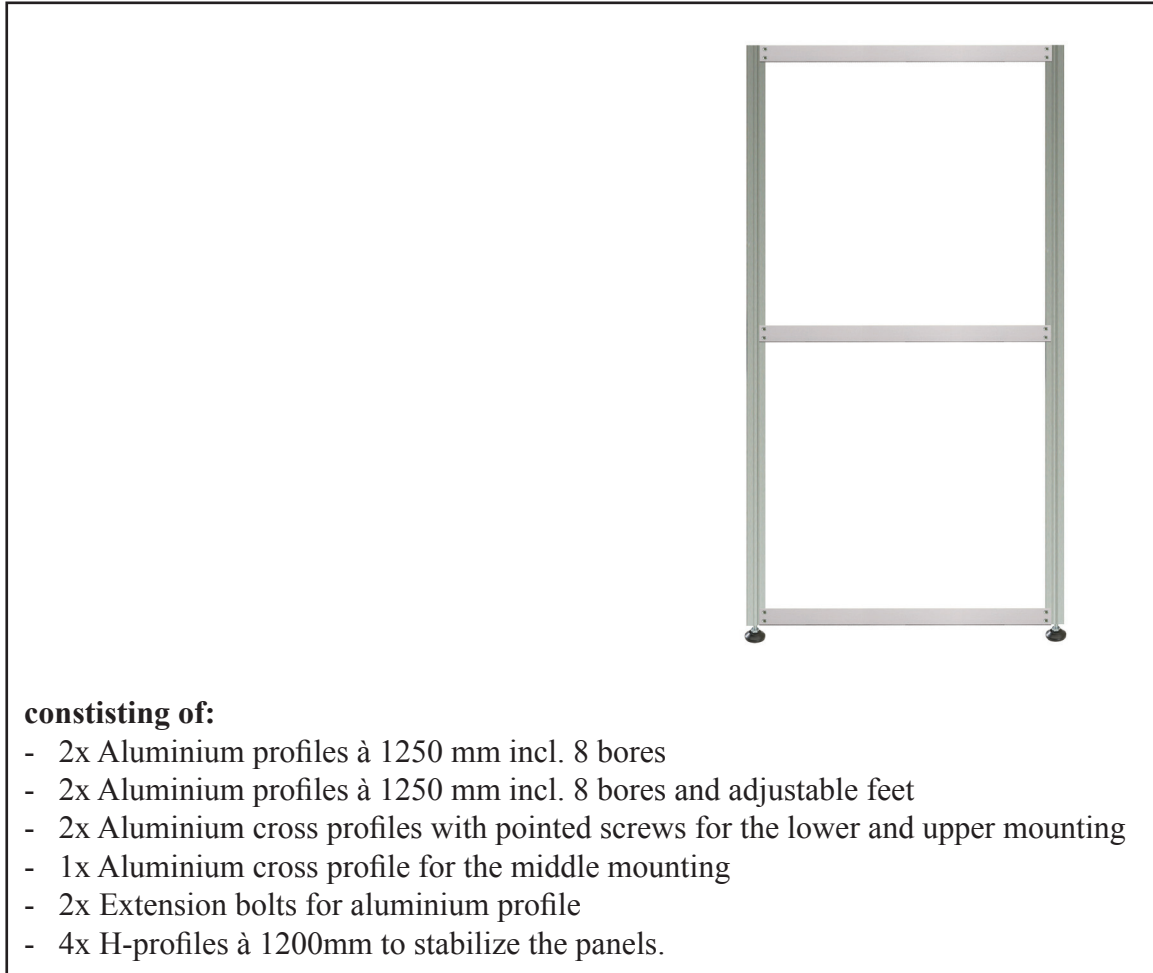

Important

Pointed screws must be used for all profiles with screw holes.


1. Mount the bottom cross profiles including the pointed screws and then insert the extension bolts into the aluminium profile.

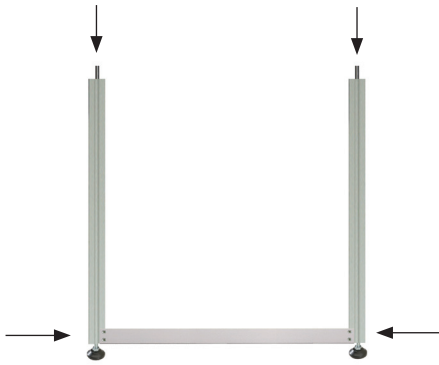

2. After then mount the middle cross profile.



3. Push the top profiles onto the bolts. Ensure that the holes face upward.

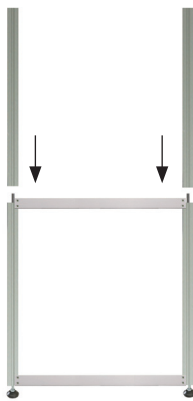

4. Mount the upper aluminium cross profile incl. pointed screws.

