

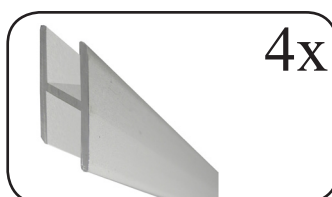
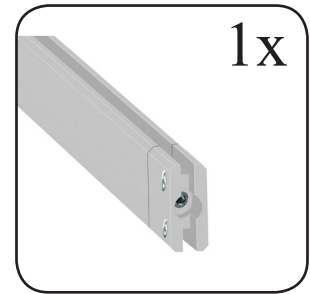
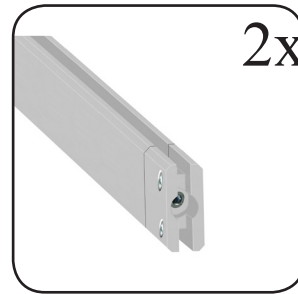


Assembly instructions for the Basic Modul Z101

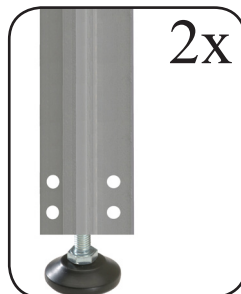

constisting of:


- 2x Aluminium profiles à 1250 mm incl. bores
- 2x Aluminium profiles à 1250 mm incl. 8 bores and adjustable feet
- 2x Aluminium cross profiles with pointed screws for the lower and upper mounting
- 1x Aluminium cross profile for the middle mounting
- 4x H-profiles à 1200mm to stabilize the panels.
- 2x Extension bolts for aluminium profile
- 2x PVC rigid foam panels à 952 x 1212 mm

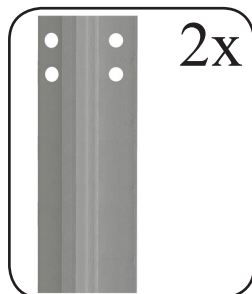

Important

Pointed screws must be used for all profiles with screw holes.

1. Mount the bottom cross profiles including the pointed screws and then insert the extension bolts into the aluminium profile.

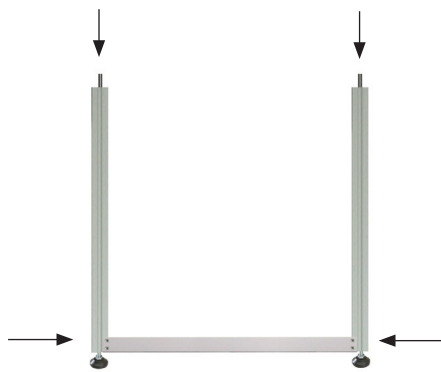


2. Insert the lower panels with the H-profiles.



3. Mount the cross profiles.



4. Push the top profiles onto the bolts. Ensure that the holes face upward.

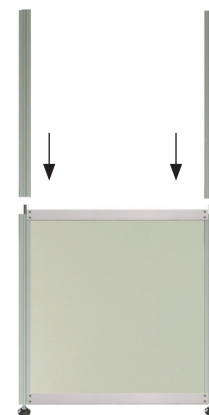

5. Insert the upper panels with the H-profiles.



6. Mount the upper aluminium cross profile incl. pointed screws.

