
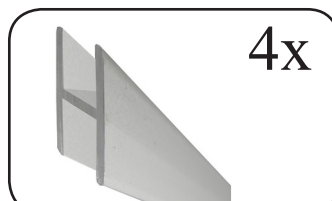
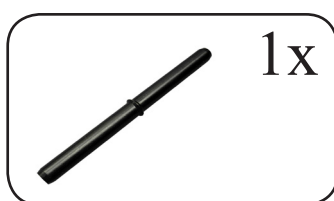
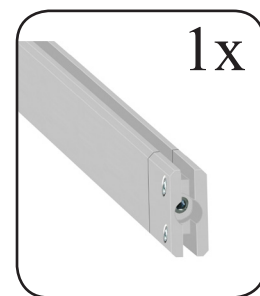
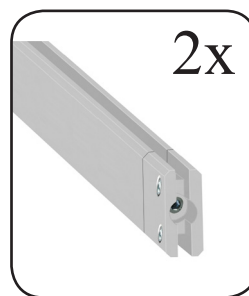
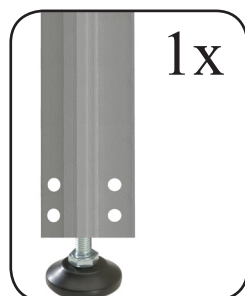
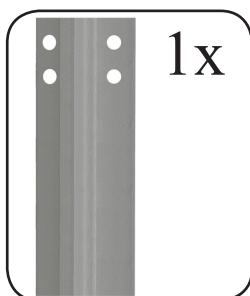



Assembly instructions for the Extension Modul Z105

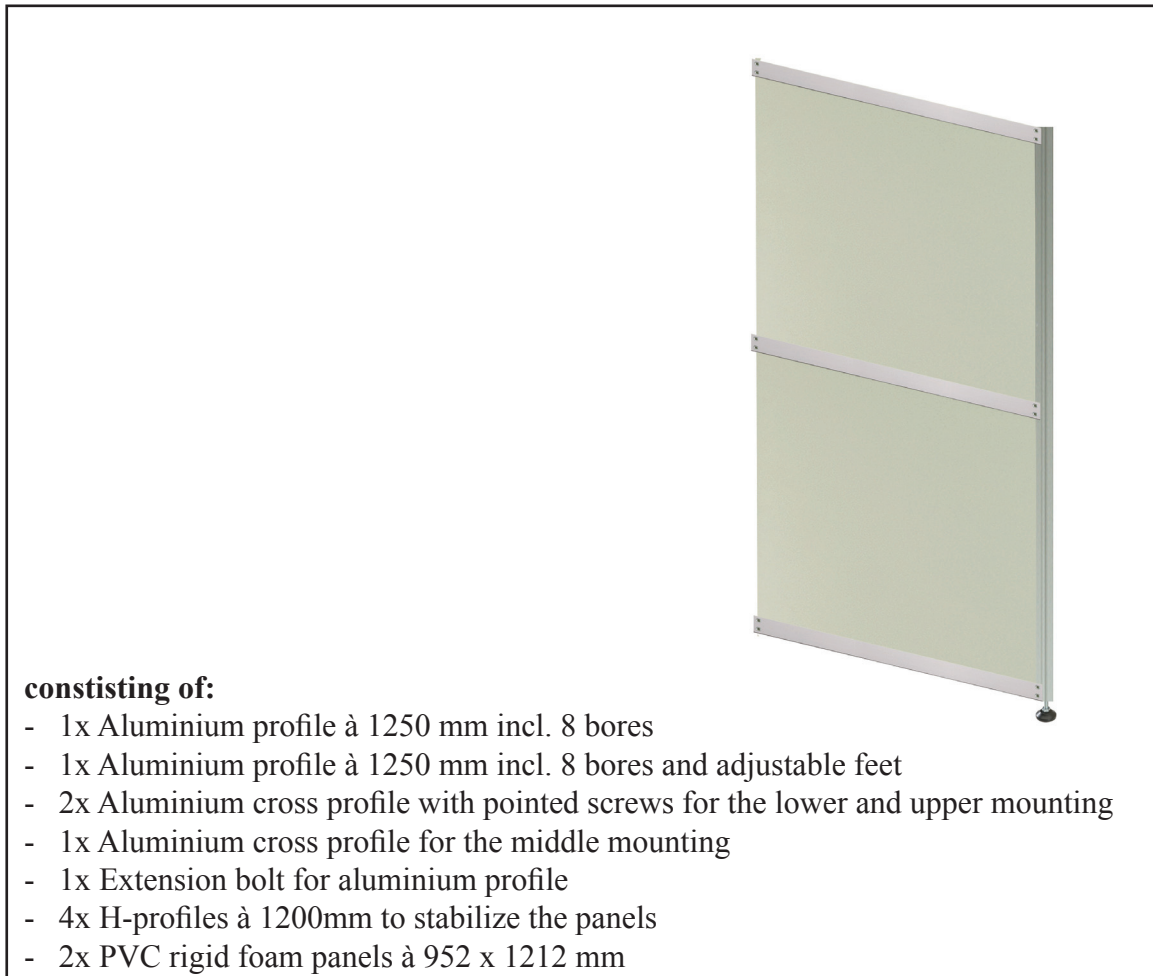

Important

Pointed screws must be used for all profiles with screw holes.


1. Mount the bottom cross profiles including the pointed screws and then insert the extension bolts into the aluminium profile.

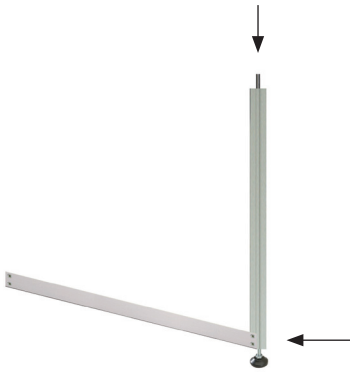

2. Insert the lower panels with the H-profiles.



3. Mount the cross profiles.

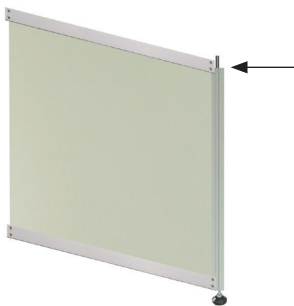

4. Push the top profiles onto the bolts. Ensure that the holes face upward.



5. Insert the upper panels with the H-profiles.



6. Mount the upper aluminium cross profile incl. pointed screws.

