

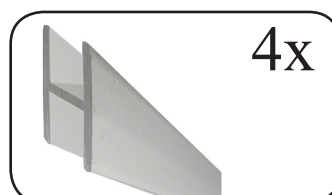
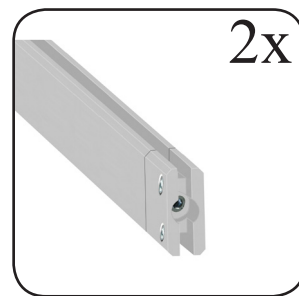


# Assembly instructions for the Extension modul Z106

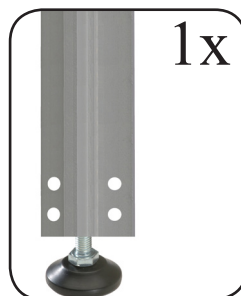

**constisting of:**


- 1x Aluminium profile à 1250 mm incl. 8 bores
- 1x Aluminium profile à 1250 mm incl. 8 bores and adjustable feet
- 2x Aluminium cross profile with pointed screws for the lower and upper mounting
- 1x Extension bolts for aluminium profile
- 4x H-Profiles à 1217mm to stabilize the panels.

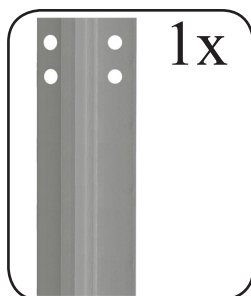


## Important

Pointed screws must be used for all profiles with screw holes.

1. Mount the bottom cross profiles including the pointed screws and then insert the extension bolts into the aluminium profile.

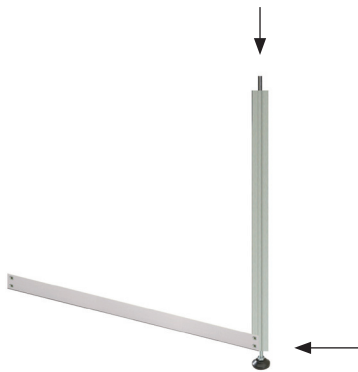

2. Push the top profiles onto the bolts. Ensure that the holes face upward.

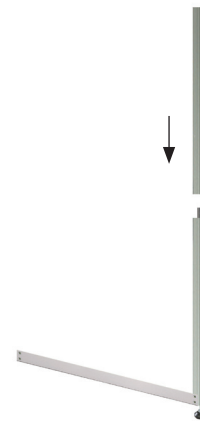

3. Mount the upper aluminium cross profile incl. pointed screws.

