
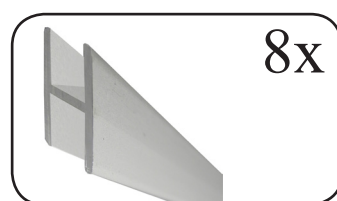
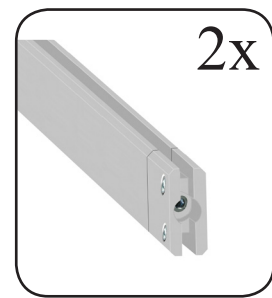
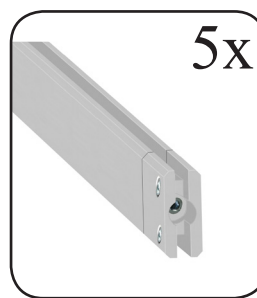
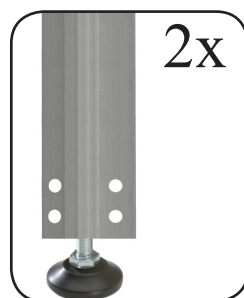
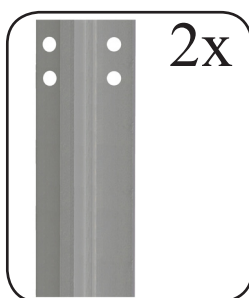


Assembly instructions for the Kabine Z110

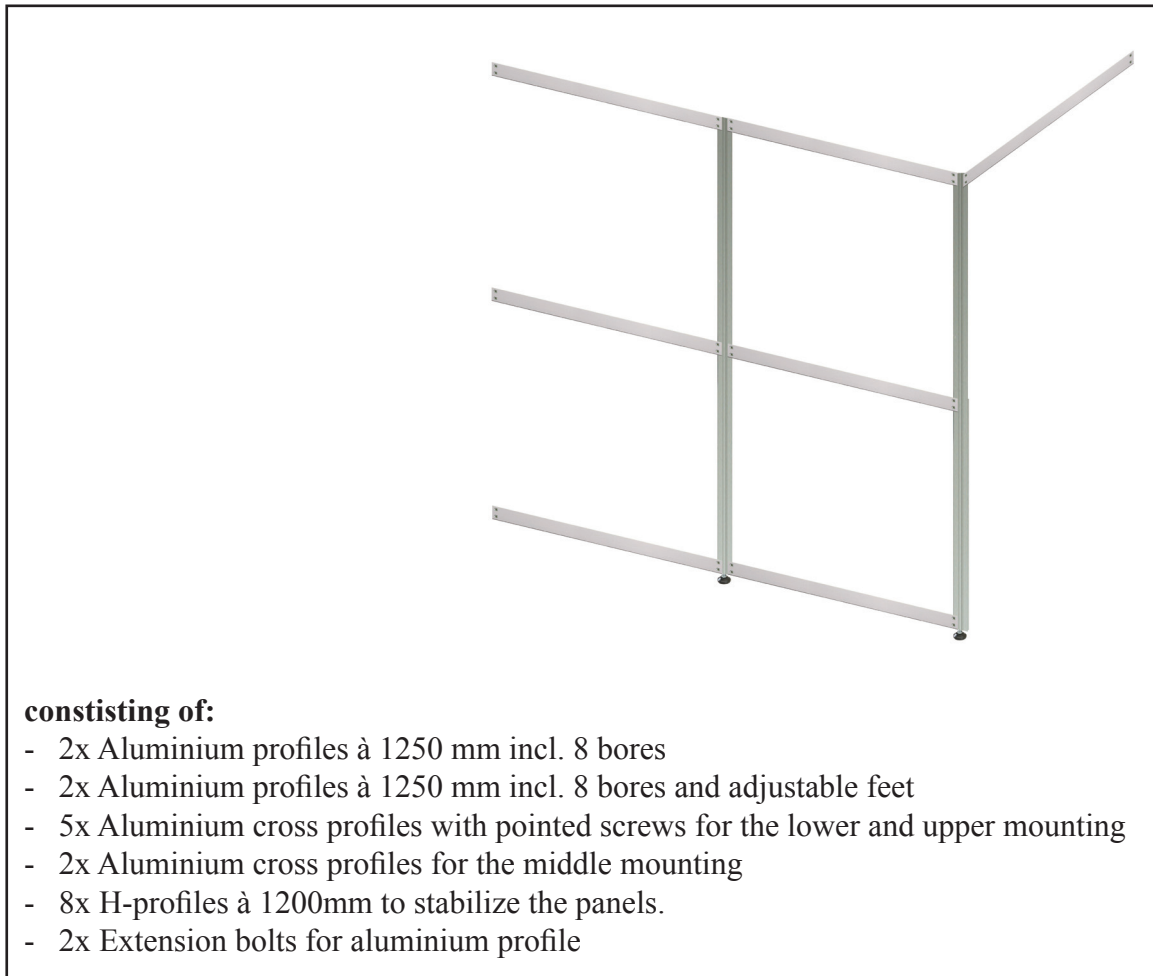

Important

Pointed screws must be used for all profiles with screw holes.


1. Mount the bottom cross profiles including the pointed screws.



2. Then mount the cross profiles and insert the bolts in the profile.



3. Push the top profiles onto the bolts. Ensure that the holes face upward.

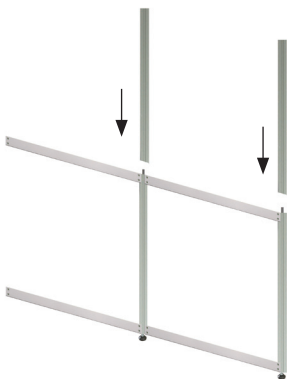

4. Then mount the cross profiles including the pointed screws.

