
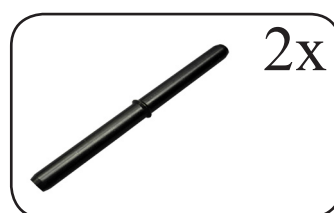
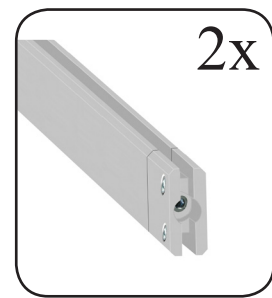
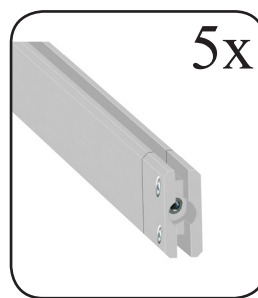
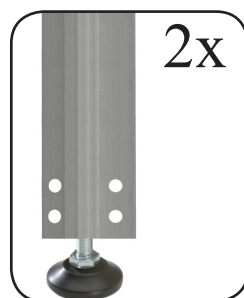
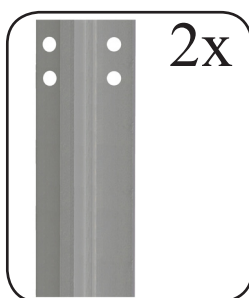


Assembly instructions for the Kabine Z111

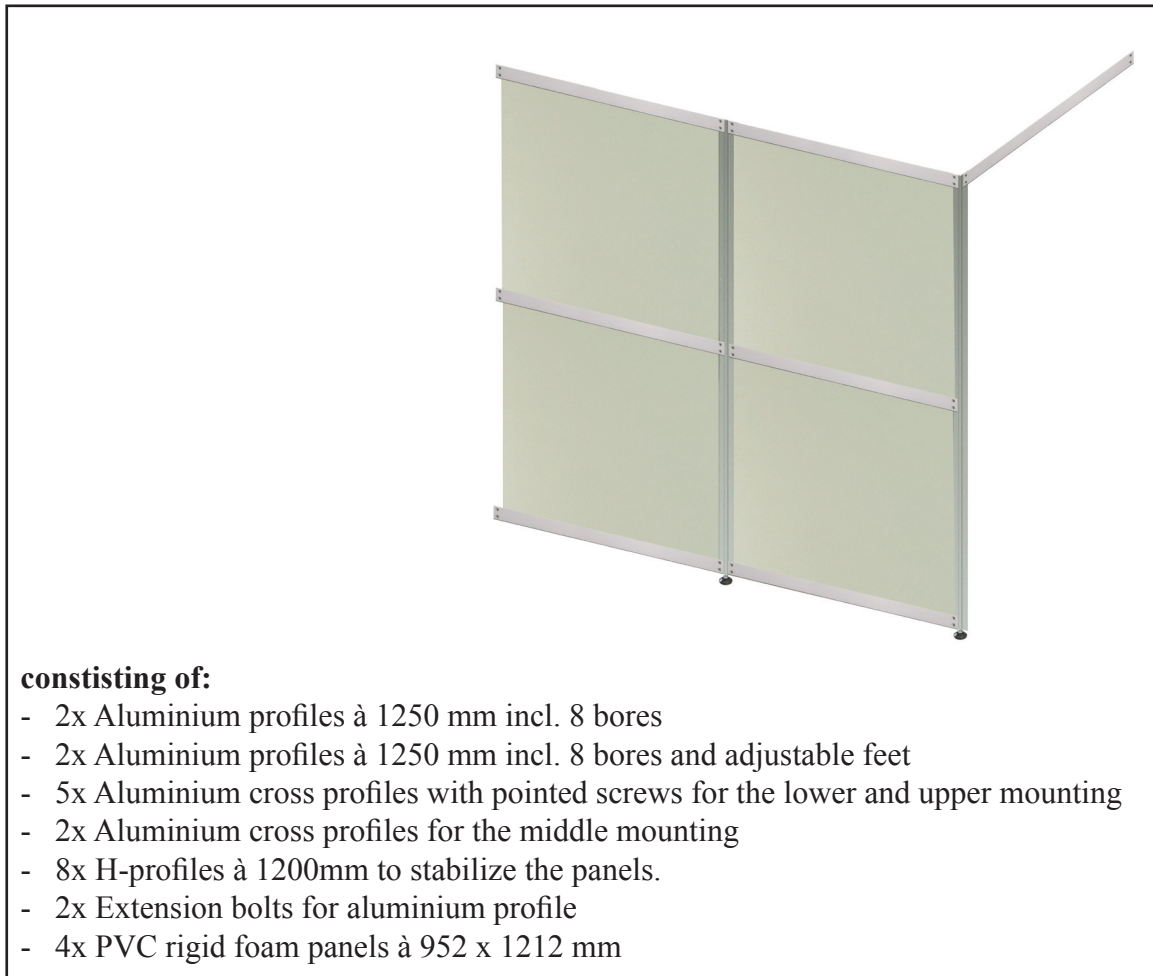


Important

Pointed screws must be used for all profiles with screw holes.

1. Mount the bottom cross profiles including the pointed screws.



2. Insert the lower panels with the H-profiles.

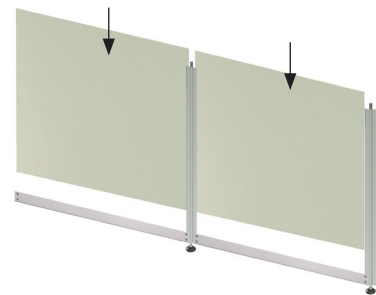

3. Mount the cross profiles and insert the bolts in the profile.



4. Push the top profiles onto the bolts. Ensure that the holes face upward.



5. Insert the upper panels with the H-profiles one after the other.



6. Mount the cross profiles including the pointed screws.

