

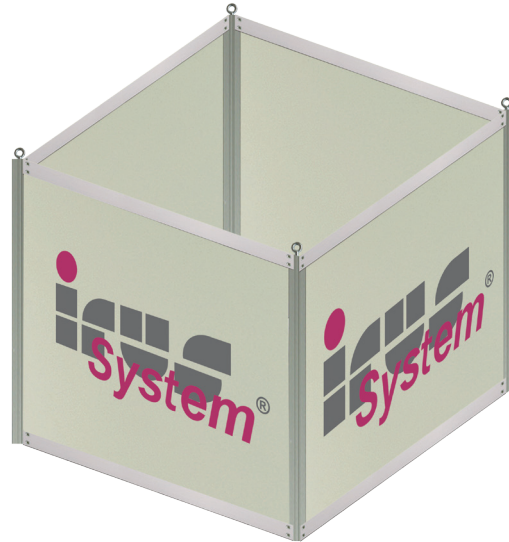
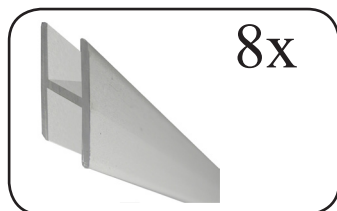
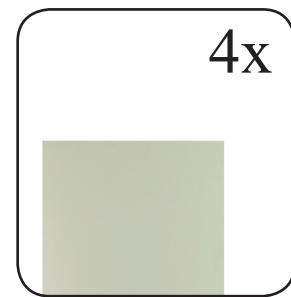


# Assembly instructions for the Advertising cube 40.123

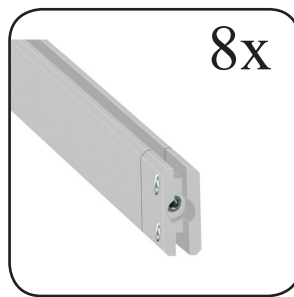

**constisting of:**


- 4x Aluminium profiles à 1000 mm incl. 8 bores
- 8x Aluminium cross profiles with pointed screws for the lower and upper mounting
- 4x PVC foam boards à 952 x 946 mm
- 8x H-profiles à 934 mm to stabilize the panels.
- 4x Ring screw M10

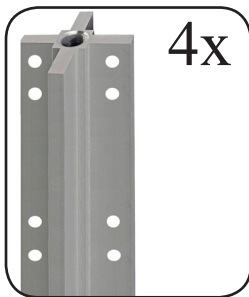


### Important during assembly

Pointed screws must be used for all profiles that have holes.

1. Mount the bottom cross profiles including the pointed screws to form the corner.

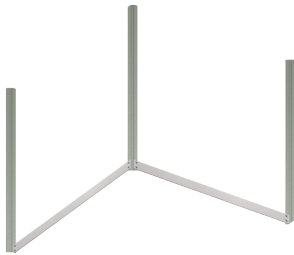


2. Insert the lower panels with the H-profiles and then mount the cross profiles.

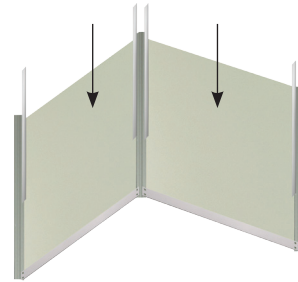

3. Mount the required lower cross profiles including pointed screws.



4. Insert the remaining panels with the H-profiles one after the other.

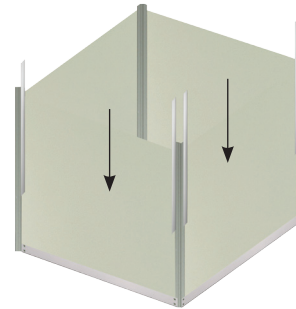

5. Mount the cross profile incl. pointed screws.



6. Turn the ring screw in the aluminum profile.

