

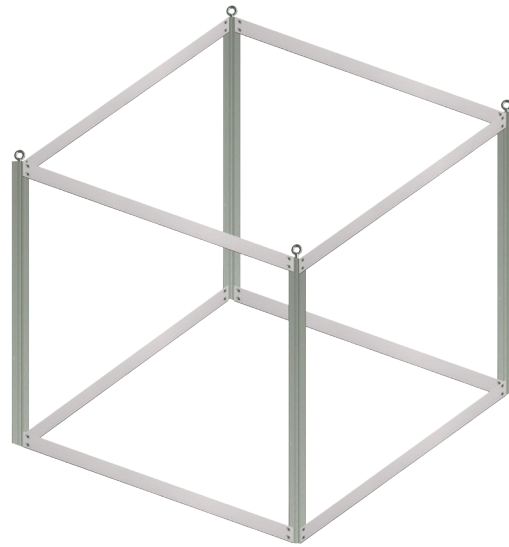
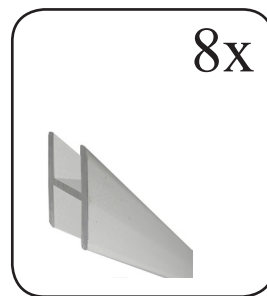


## Assembly instructions for the Advertising cube 40.125

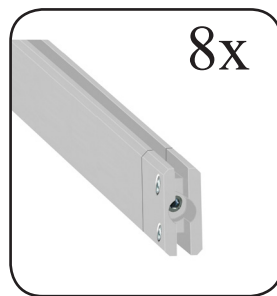

**consisting of:**


- 4x Aluminium profiles à 750 mm incl. 8 bores
- 8x Aluminium cross profiles with pointed screws for the lower and upper mounting
- 8x H-profiles à 684 mm to stabilize the panels
- 4x Ring screws M10

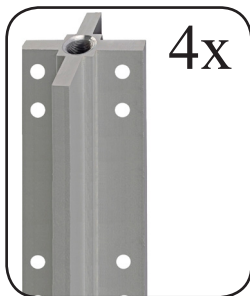


### Important during assembly

Pointed screws must be used for all profiles that have holes.


1. Mount the bottom cross profiles including the pointed screws to form the corner.

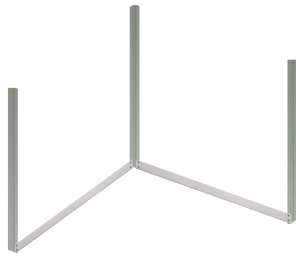


2. Mount the upper cross profiles including the pointed screws.

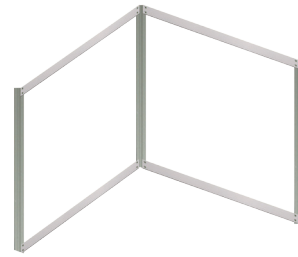

3. Mount the required lower cross profiles including pointed screws.

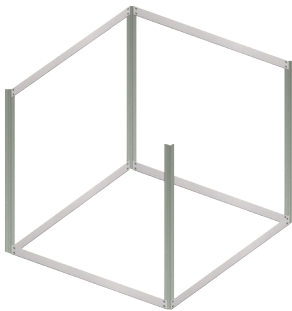

4. Mount the upper cross profiles including the pointed screws.

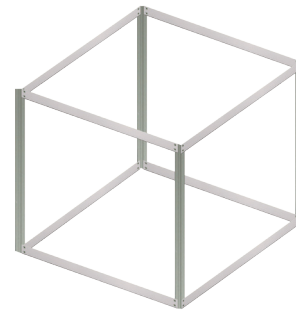

5. Turn the ring screw in the aluminum profile.

