

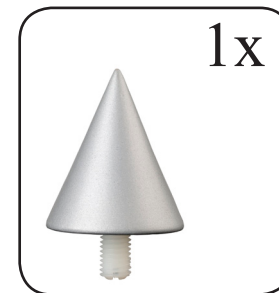
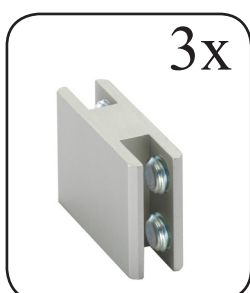
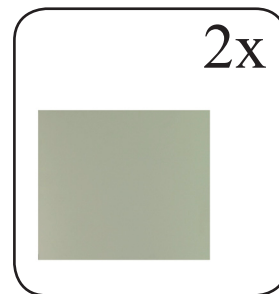
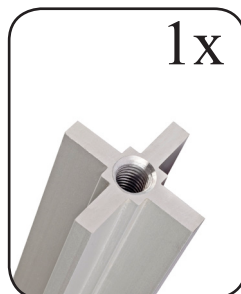


# Assembly instructions for the partitions „Attachment module 90°-180°I“ 61.214

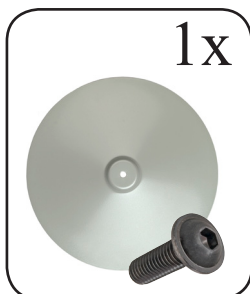


1. Mount the round base to the aluminium profiles.

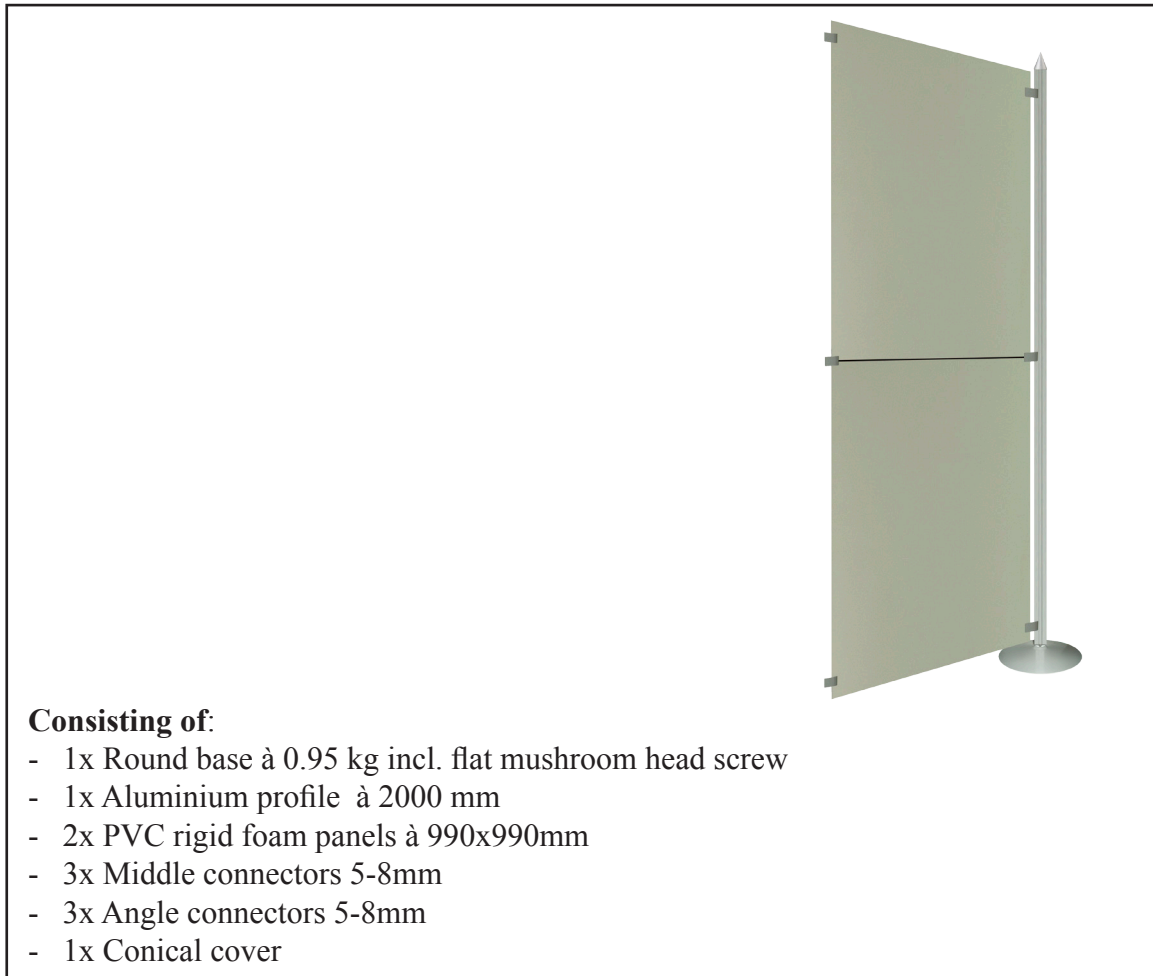

2. Mount the conical cover.



3. Attach the connectors to the profiles.

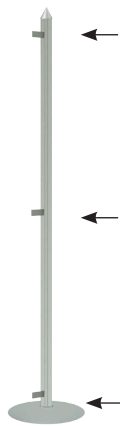

4. Mount the lower panel.



5. Mount the upper panel and attach the remaining connectors to the profiles.

