

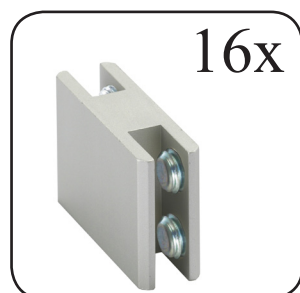
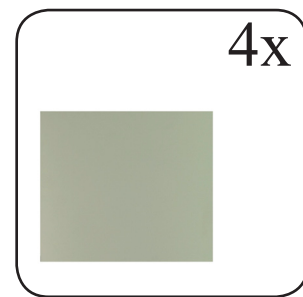



## Assembly instructions for the „Info Stand Solid II“ 61.419

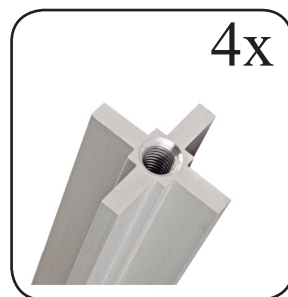

1. Mount the round base to the aluminium profiles using the flat mushroom head screws.

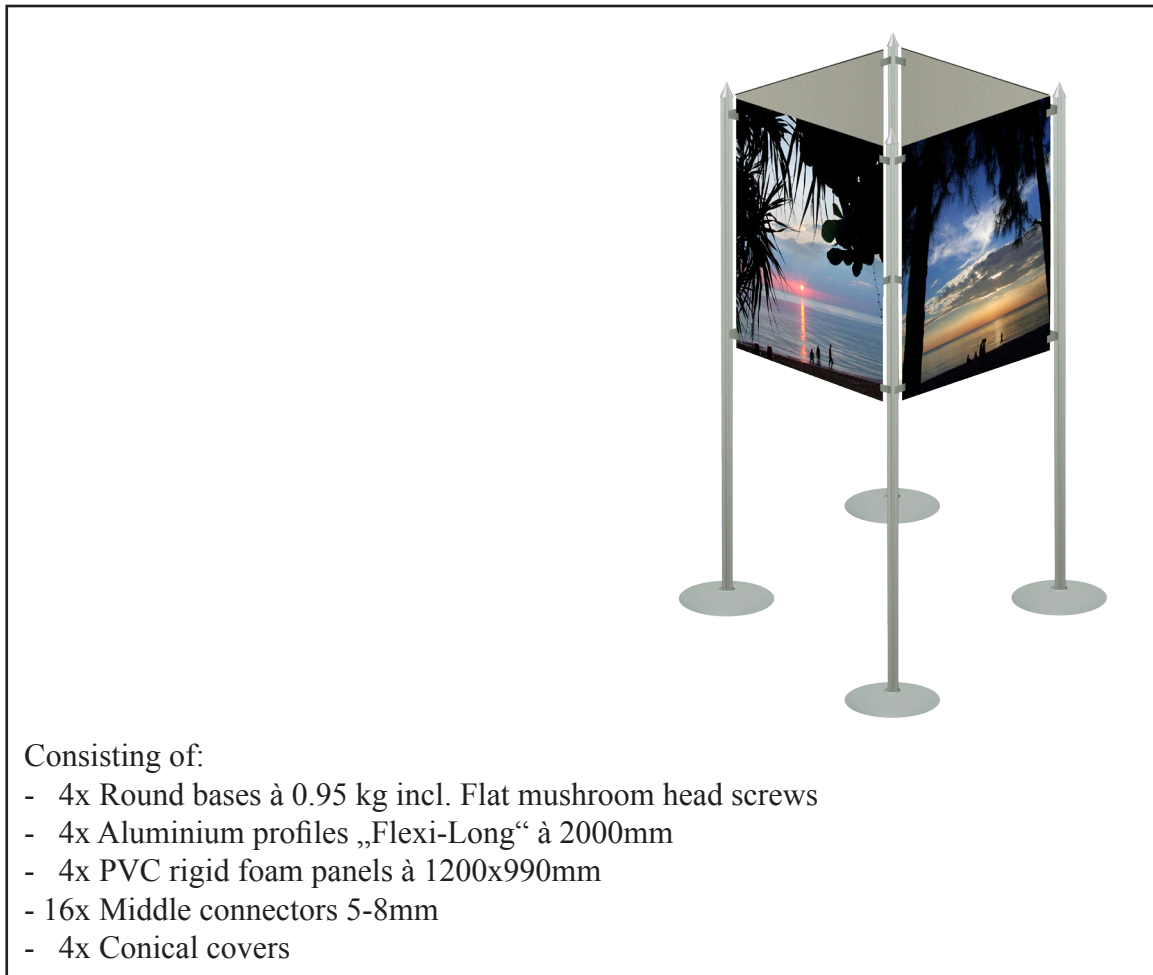

2. Mount all the conical covers.

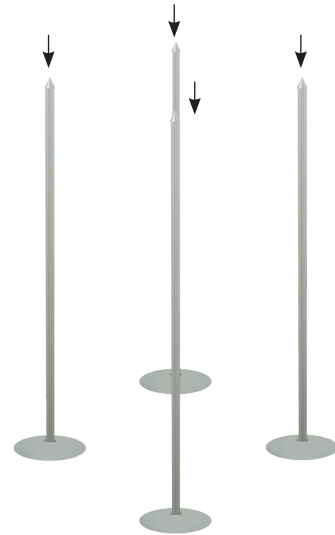

3. Attach the middle connectors to the first panel and screw the pre-mounted panel to the aluminium profiles.



4. Attach the middle connectors to the second panel and screw the pre-mounted panel to the aluminium profiles.



5. Attach the middle connectors to the third panel and screw the pre-mounted panel to the aluminium profiles.



6. Finally attach the middle connectors to the fourth panel and screw the pre-mounted panel to the aluminium profiles.

