

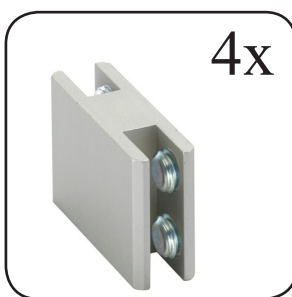
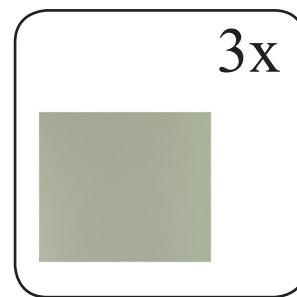



# Assembly instructions for the Info stand „Eco III“ 61.426

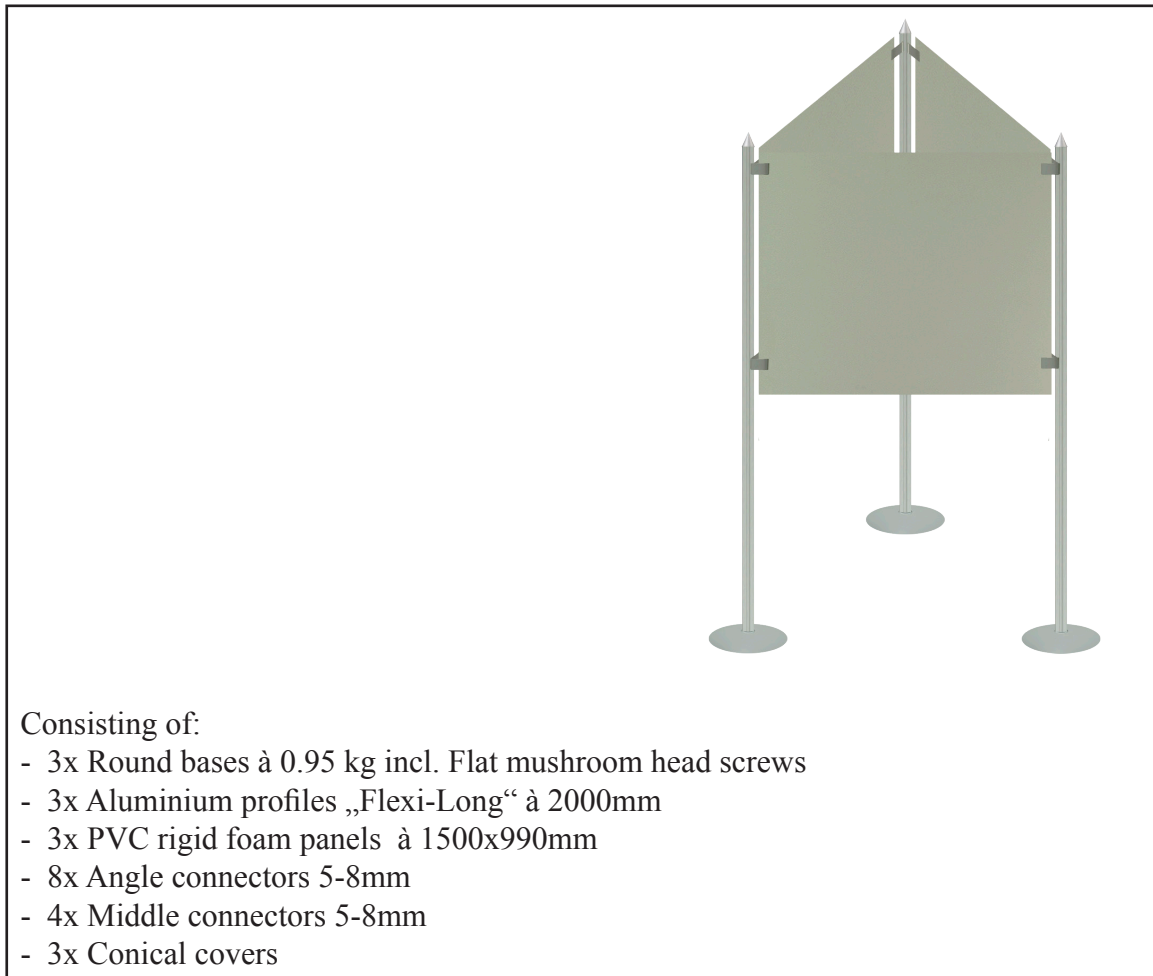


1. Mount the round base to the aluminium profiles using the flat mushroom head screws.

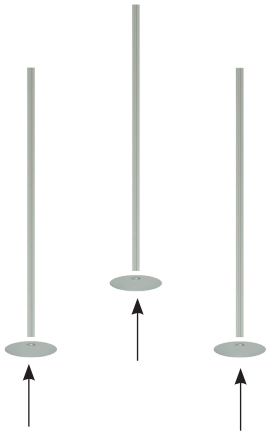


2. Then mount the conical cover.

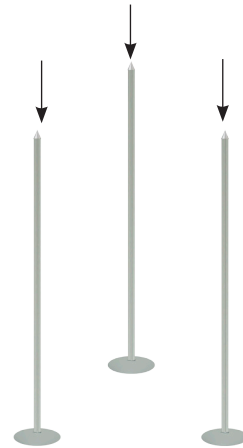

3. Attach the middle connectors to the first panel.

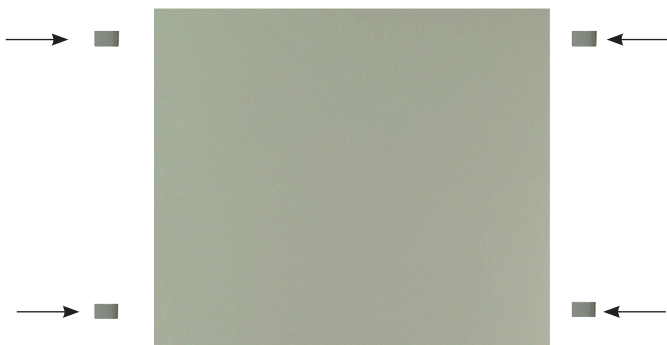

4. Now mount the pre-assembled panel at the aluminium profiles.

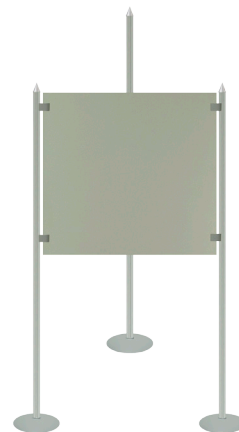

5. Now mount the angle connectors on the second panel.



6. Then mount the next pre-assembled panel at the aluminium profiles.



7. Now mount the angle connectors on the last panel.



8. Now mount the last pre-assembled panel at the aluminium profiles.

